

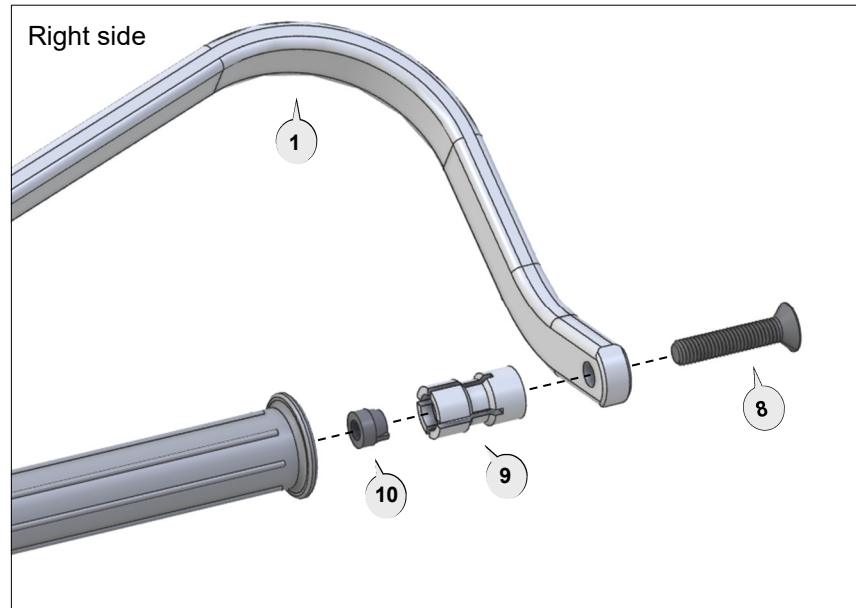


Preparation

Remove original bar end weights and handguards (if fitted).

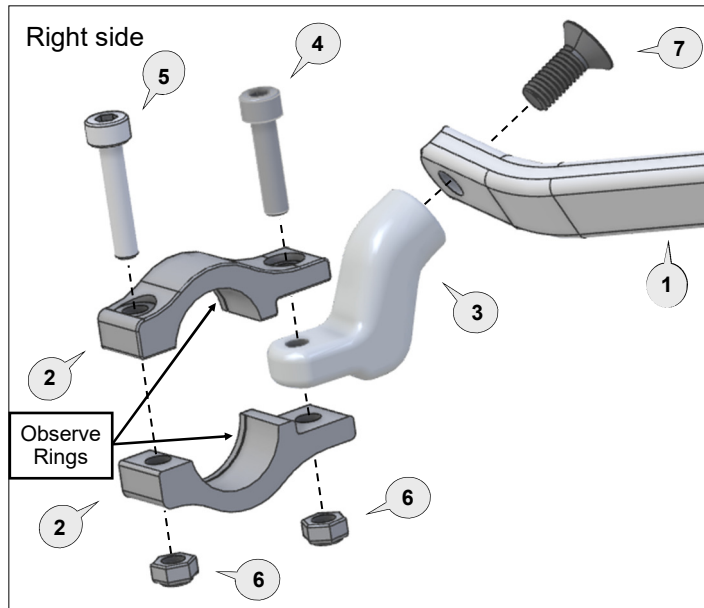

Bar Side View

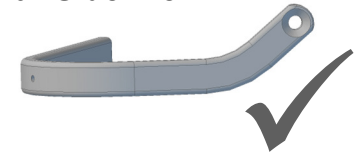

Fitting Procedure

Loosely assemble clamp (2) and clamp connector (3) to handlebar as per diagram.

Attach backbone with applicable parts to the handlebar end and also to the clamp connector (3).

Note: Preferred backbone position is horizontal when viewed from side.

Tighten bolt (8) at the handlebar end.

Tighten Clamp bolts in the following order:

Tighten bolt (7) through the aluminium bar (1) to the clamp connector (3) of the clamp assembly.

Tighten bolt (4) to solidly lock the clamp connector (3) between the clamp saddles (2).

Tighten bolt (5) to secure the clamp assembly firmly to the handlebar.

Use recommended torque specifications over page.











Personalise Your Protection

Guard options sold separately

JET	JET-003
VPS	VPS-003
Storm	STM-003
CARBON	BCF-003

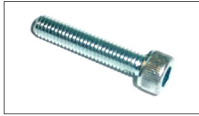

Phone: +61 (0)2 4271 8244
Email: info@barkbusters.net

1 Aluminium Bar  PN: BAR-V058 Pcs. 1 Left & 1 Right	2 Clamp Saddle  PN: CS-01 Pcs. 2 lefts & 2 rights	3 Clamp Connector  PN: CP5 Pcs. 2	4 Socket Head Bolt 25mm  PN: M6x25SHCSZP Pcs. 2	5 Socket Head Bolt 30mm  PN: M6x30SHCSZP Pcs. 2	6 Nylock Nut  PN: M6LN Pcs. 4	7 Button Head Bolt 20mm  PN: M8x20BHCSZP Pcs. 2	8 Flat Head Bolt 45mm  PN: M8x45FHCSZP Pcs. 2
9 Bar End Expander  PN: BBE17 Pcs. 2	10 Nut 12mm two wings  PN: NUT12 Pcs. 2						

Recommended Torque Settings	
M6	10 Nm (7.4 lbf ft)
M8	28 Nm (20.65 lbf ft)

CAUTION:

Installation of the handguard is safety-relevant work and can be complicated. We recommend the installation be performed by a motorcycle service technician. Rideworx accepts no liability for damages caused by improper mounting. All screws, bolts and nuts, including all replacement hardware provided by Rideworx, should be tightened to the torque specified in the below table. After the first 50km of riding check all screws, bolts and nuts are tightened to the correct torque. We recommend a medium strength liquid thread lock product on all fasteners.

WARNING:

It is important there is a working clearance (approx 3mm) between the throttle grip end and the handguard to ensure a free closing throttle. Check operation of all handlebar controls, specifically the throttle, front brake, kill switch and clutch to ensure they are operating correctly and are in accordance with the OEM specifications. Do not ride the motorcycle if any controls are not operating correctly. Check periodically that all bolts are tight.



RIDEWORX

Phone: +61 (0)2 4271 8244
 Email: info@barkbusters.net
 Web: www.barkbusters.net



Disclaimer:

A failure to follow these fitting instructions could cause serious injury, death or property damage. These handguards are intended solely for use with motorcycles/ATV/snowmobiles/scooters that have not been modified. They are not designed to prevent injury or death while riding or in an accident or crash. The user must ensure that all controls are free of the handguards every time that they ride. By installing and/or using this product you acknowledge that you accept these terms and have followed the fitting instructions.