

Denali Light Mount

Kawasaki Versys 650 '07-'09

LAH.08.10100 Instructions Rev:00

PLEASE READ BEFORE INSTALLING

TWISTED THROTTLE products should be installed by a qualified, experienced motorcycle technician. If you are unsure of your ability to properly install a product, please have the product installed by your local motorcycle dealer. TWISTED THROTTLE takes no responsibility for damages caused by improper installation.

All screws, bolts, and nuts, including all replacement hardware provided by TWISTED THROTTLE should be tightened to the torque specified in the OEM maintenance manual for your motorcycle. If no torque specifications are provided in the OEM maintenance manual, the following torques may be used:

M5.....	3.5 ft-lbs (5 Nm)
M6.....	7 ft-lbs (9.6 Nm)
M8.....	13 ft-lbs (18 Nm)

All screws, bolts, and nuts should be checked after driving the first 30 miles (50 km) to ensure that all are tightened to the proper torque.

Medium strength liquid thread-locker (i.e., "Loctite") should be used to secure all screws, bolts, and nuts.


Distributed by:	
Twisted Throttle LLC 570 Nooseneck Hill Rd Exeter, RI 02822	phone: 855.255.5550 fax: 401.223.6955 www.twistedthrottle.com



Installation Instructions

Kit Contents

1	2	3	4	5
Lens Head Screw	Spacer	Lens Head Screw	Spacer	Spacer
				
M6x50.....ISO 7380 Qty.....2	OD: 13mm ID: 6.5mm L: 28mm Qty.....2	M6x70.....ISO 7380 Qty.....2	OD: 19mm ID: 6.5mm L: 19mm Qty.....2	OD: 13mm ID: 6.5mm L: 14mm Qty.....2

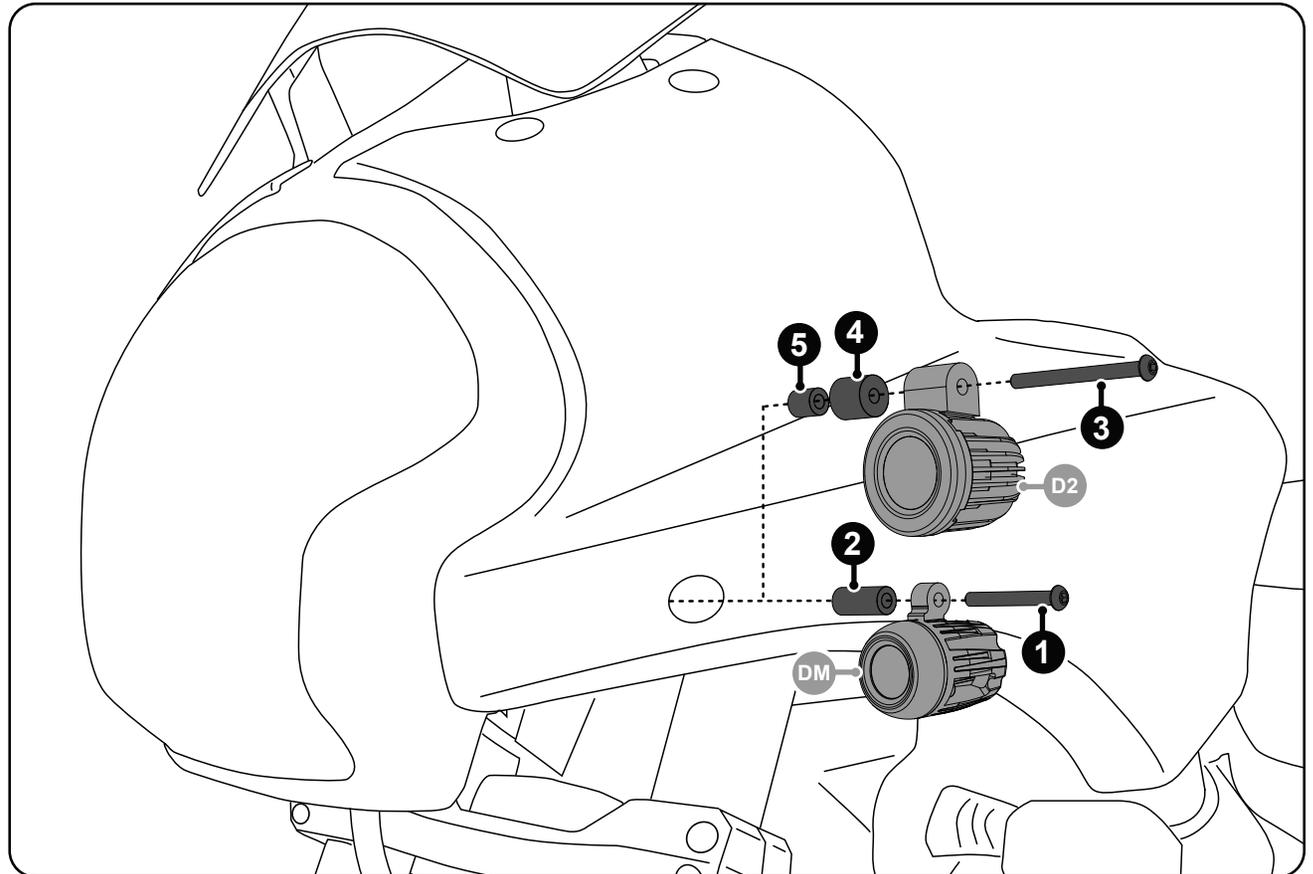

Step One: Remove the OEM screw from the mounting point illustrated on the upper fairing.

Option One (DM): Use Bolt (#1) and Spacer (#2) to mount the DM light pod to the motorcycle. Repeat steps on the opposite of the motorcycle.

Option Two (D2): Use Bolt (#3) and Spacers (#4) & (#5) to bolt the D2 light pod to the motorcycle. Repeat steps on opposite side of the motorcycle.